




FOOD WARMER

Model No 3918-600-GB

IMPORTANT: Please provide model number and serial number (located on rear of item 22, Backplate) when ordering parts.

Ref.	Part No.	Description	Qty	Ref.	Part No.	Description	Qty
1	112920	Box, Less Door, With Handles & Latch	1	24	11078	Holder, Fuse	1
2	109502	Door	1	25	109500-07	Fuse, 250V 3A, GMA 5 x 20mm	1
3	109501-05	Rivet, Pop, 1/8" Dia, 1/8" Grip	11	26	112921	Screw, Philips, 10-24 x 1-1/4"	8
4	112922	Shelf	1	27	112923	Washer #10	9
5	112924	Latch	1	28	108278	Cord, Power (120V Warmer)	1
6	109505-08	Rivet, Pop, 5/32" Dia, 3/16" Grip	4	29	110076	Screw, Machine, 10-24 x 1/2"	5
7	108352-03	Handle, Side	2	30	110070	Nut, 10-24	1
9	108532-01	Handle, Top	1	31	110073	Screw, Machine, 6-32 x 1/2"	2
11	109501-04	Cover, Element	1	32	110072	Nut, Hex, 6-32	2
14	108274-100	Element, 120V	1	33	110071	Washer, Lock #6	2
14	108274-100	Element, 240V	1	34	110075	Housing, Switch/Fuse	1
18	109500-02	Thermostat	1	35	111934	Plate, Heater Element, Mounting	2
21	109500-10	Screw, Philips, Sheet-Metal, #8x3/8"	4	36	108352-07	Rivet, Pop, 5/32" Dia, 1/4" Grip	20
22	109500-500	Panel Assembly, Back 120V (Complete With Element Etc.)	1	37	111932	Cord, Power, With Gravity Rack System (120V or 240V Warmer)	1
22	109500-600	Panel Assembly, Back 240V (Complete With Element Etc.)	1				
23	110079	Plug / Switch Combination	1				

NOTE: Switch light is on whenever switch is on - even if fuse blows.

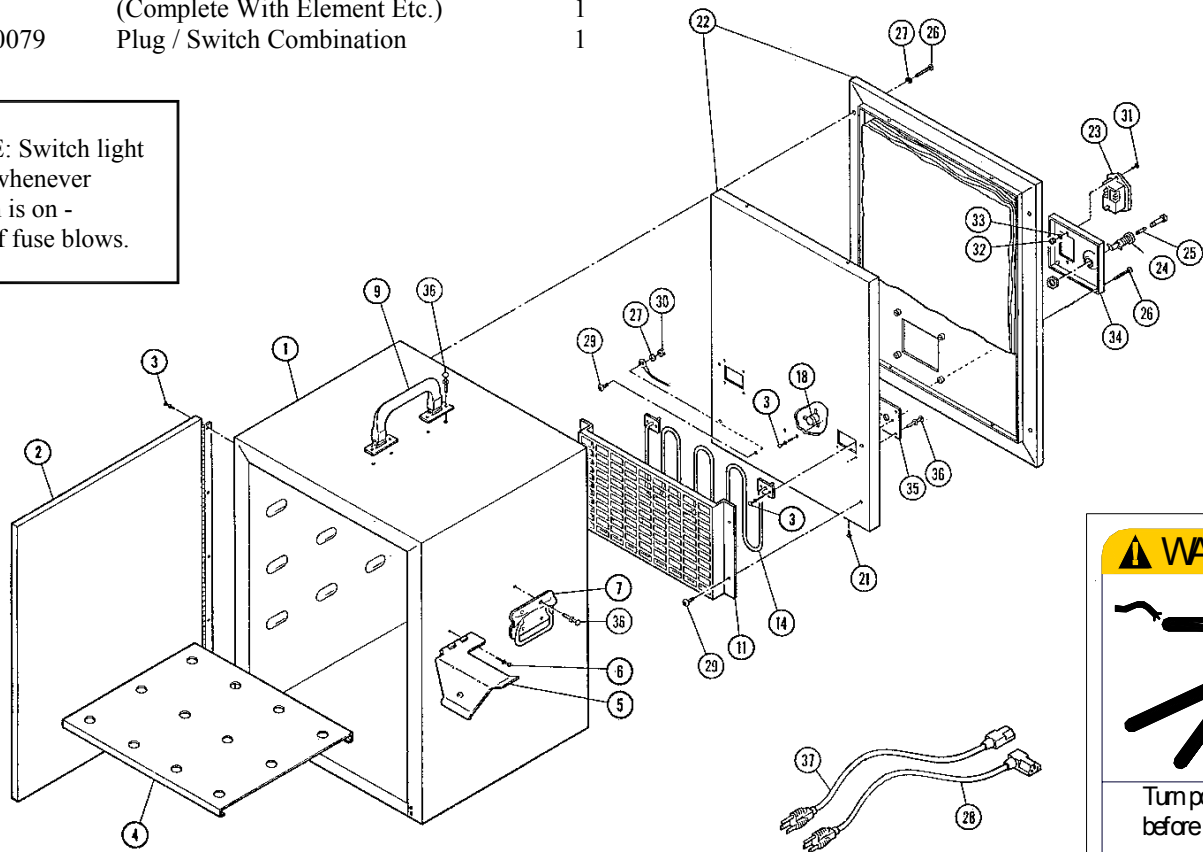

Customer Care

In accordance with our performance promise we at Sico operate a policy of continued customer care. Our Customer Service Team is always at your service to ensure ongoing, trouble free operation of your equipment after the warranty period has elapsed. Call your local number for further information.

WARNING

Turn power off before servicing

Inside surface may be **HOT**

Remove rear panel before washing

108600-GB

England: Sico Europe Limited 01233 643311