

OPERATING / INSTALLATION INSTRUCTIONS FOR SICO RAMP & FILLER UNITS




Be sure you read and understand the following instructions before using these products. Failure to heed these instructions may result in serious personal injury.

Further copies of this operating instruction are available from:






Sico Europe Limited
 The Link Park,
 Lympe Industrial Estate,
 Lympe, Kent CT21 4LR, England
 Tel: +44 (0) 1303 234000
FREEPHONE: (UK only) 0800 085 8186
 Fax: +44 (0) 1303 234001
 e-mail: sales@sico-europe.com
 www.sico-europe.com

1. MOVING THE RAMP / FILLER UNIT

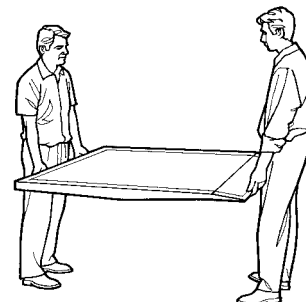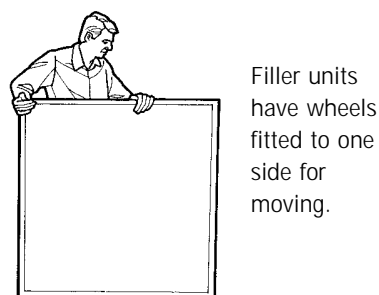
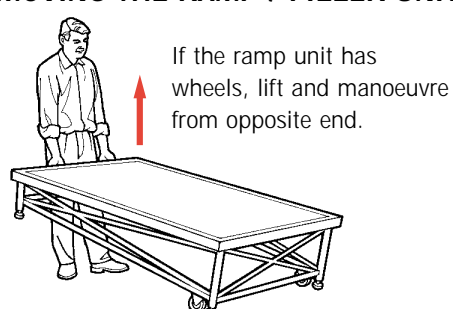


2. DISENGAGING THE CASTORS

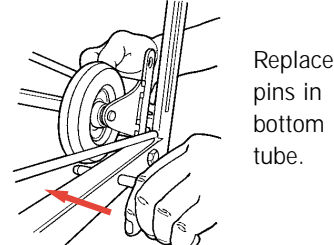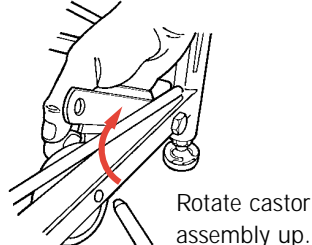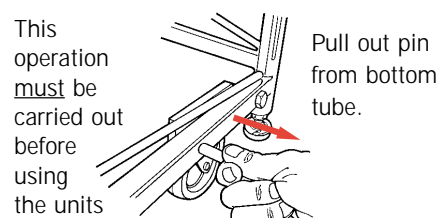




Repeat this step on opposite side of unit. Re-engaging is reverse of this procedure.

3. ADJUSTING HEIGHT OF DUAL HEIGHT FILLER

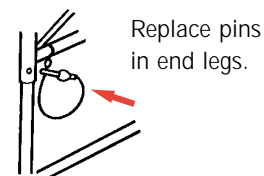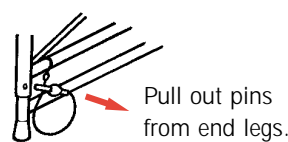


Repeat this step on opposite side of unit.

4. LAYING THE RAMP / FILLER SYSTEM OUT

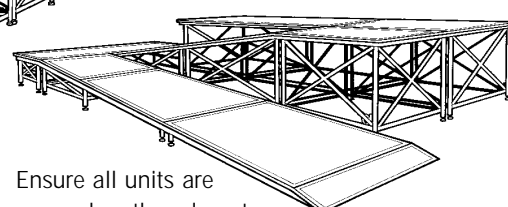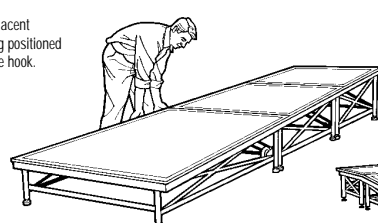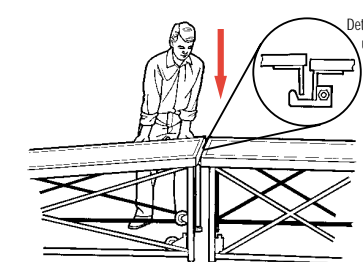


Adjust levelling feet on each section if necessary to stop ramp sections rocking. Tighten using a 14mm and 19mm spanner.

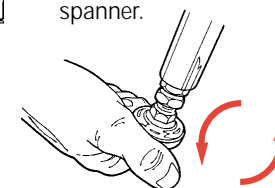


5. ADDING HAND RAILS


The first two ramp sections and fillers at 15cm & 20cm have bolt-on handrails. Align handrail and bolt in position using M10 bolts supplied and 17mm spanner.

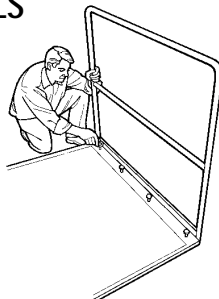

All other handrails / guardrails clamp to the deck. Locate hooks under stage edge, pull upright to a fully vertical position.

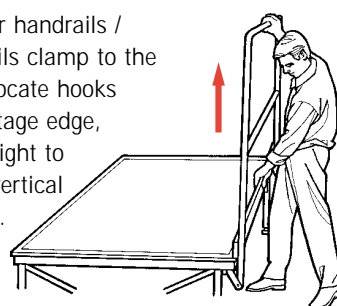

Detail of pivot bar in lowered position.

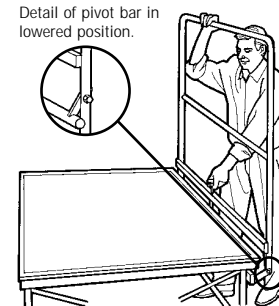

Engage the pivot bar by pushing down and tighten clamp. When used at the end of a unit the pivot bar remains lifted.

MAINTENANCE CONTRACTS AVAILABLE TELEPHONE 1303 234000 FOR DETAILS
 FREEPHONE (UK only) 0800 085 8186
 To minimise wear lubricate pivot points every 6 months with light oil.

106917-GB 05/04