

OPERATING INSTRUCTIONS FOR SICO GRADUATE TABLE SEATING UNITS.


Be sure you read and understand the following instructions before using this Graduate Table Seating Unit. Failure to heed these instructions, and those contained in the yellow warning notice and operator training video may cause the unit to tip over resulting in serious personal injury.

Further copies of the yellow warning notice, this operating instruction and video are available from:



Sico Europe Limited
 The Link Park,
 Lympne Industrial Estate,
 Lympne, Kent CT21 4LR, England
 Tel: +44 (0) 1303 234000
FREEPHONE: (UK only) 0800 085 8186
 Fax: +44 (0) 1303 234001
 e-mail: sales@sico-europe.com
 www.sico-europe.com


MOVING THE GRADUATE TABLE SEATING UNIT

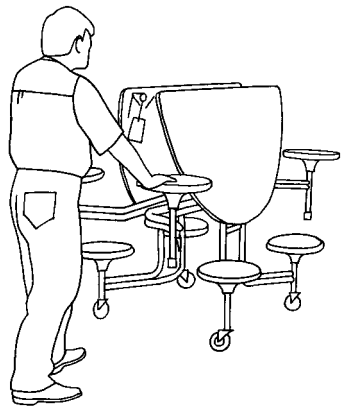

PUSH FROM END OF TABLE WITH TRANSIT LOCK ENGAGED.




DO NOT PUSH FROM SIDE AS TABLE MAY TIP OVER.

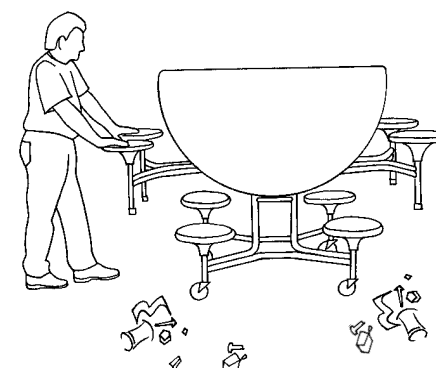


AVOID DEBRIS ON FLOOR


OPENING THE GRADUATE TABLE SEATING UNIT

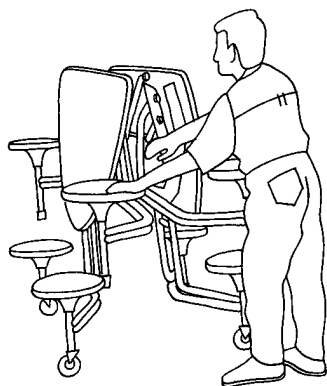

RELEASE TRANSIT LOCK AND DISENGAGE, THEN GRASP TWO STOOLS ON OPPOSITE SIDES OF THE TABLE.

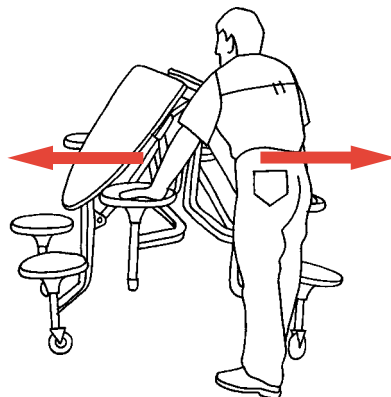


CONTINUE TO OPEN UNIT USING STOOLS AS HANDLES.

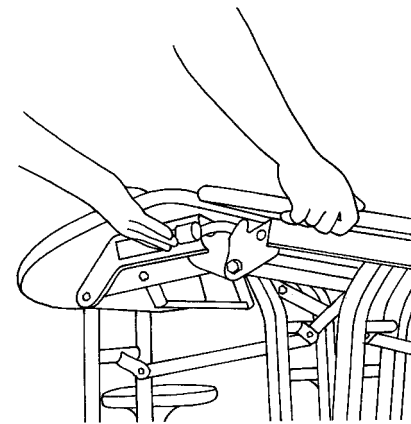


LIFT TABLE SLIGHTLY, RAISE LOCK ARM AND LOWER TABLE TO FLOOR.

CLOSING THE GRADUATE TABLE SEATING UNIT

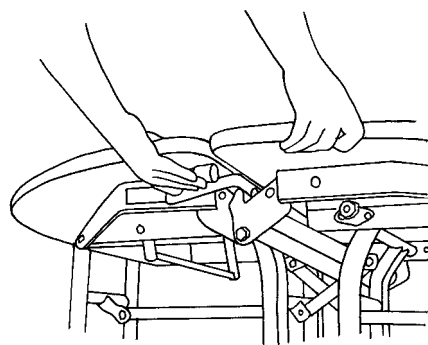

DISENGAGE CENTRE LOCK AND LIFT TABLE USING EDGE.

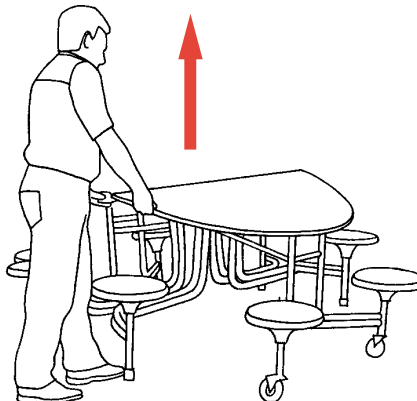

CONTINUE TO LIFT USING TABLE EDGE.



GRASP BOTH MIDDLE STOOLS AND PUSH TOGETHER TO ENGAGE LOCK.

MAINTENANCE CONTRACTS AVAILABLE! TELEPHONE 01303 234000 FOR DETAILS

To minimise wear lubricate pivot points every 6 months with light oil.

106845-GB 05/04