





SICO PARQUET PORTABLE FLOOR



Step 1

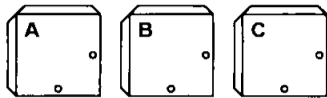

Step 2

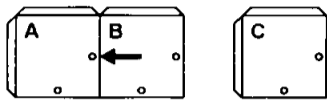

Steps 3, 4 & 5

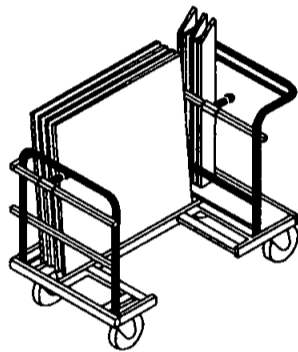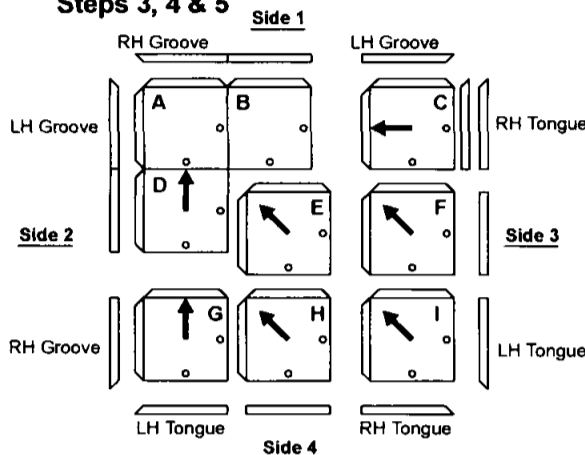

TO ASSEMBLE FLOOR PANELS

1. Place one row of panels (A,B,C....) on the floor, with their tongues pointing in the same direction.
2. Push panel B into panel A so they are **tight** together and perfectly **aligned**. Use the supplied T-type hex wrench to firmly tighten the Allen screws that locks the panels together. Do not overtighten as the tongue is self locking. Do not push several sections together and tighten them as this may cause misalignment problems - each section should be tightened as you go.
3. In the same way, install panels D and E in the second row. Keep all panels carefully aligned and tight together.
4. Repeat in clusters of four until the floor is complete. By using this technique, it is easier to make small adjustments than if you lay the panels in a long line.
5. Finish by laying the final panel at the bottom right hand corner of the area.

TO ATTACH EDGE TRIM

Now attach the Border Trims - mitred corners first, then straight sections. Fit each trim centrally to each panel, not pushed together. There should be a small gap (about 2mm) between each trim. Attach grooved trims to protruding tongues on sides 1 and 2, and tongued trims to sides 3 and 4.

TO DISASSEMBLE THE FLOOR

1. Undo all screws on all Dancefloor panels and Trims until the top of the screws are flush with the top surface. Do not remove screws or leave them projecting above the surface, or damage will occur when floor is stored.
2. Lift the panels in the reverse order of how they were laid (ie. start with the bottom right hand corner panel).

TO STORE PANELS

- Insert the edge trim strips vertically (square ends down) into the storage rack on the rear of the Sico Caddy. Secure the trim by sliding the trim-lock against the trim pieces.
- Starting at the rear of the caddy, place the panels on the Caddy one at a time with the tongue edge down.
- When all the panels have been placed on the caddy, secure them by sliding the panel-lock against the face of the front panel.
- Store the hex wrench in one of the holes to the rear of the panel-lock.

User assumes full responsibility for installation and use of all dance floor components.

Inspect the assembled floor periodically. Remove damaged or loose components, and make any necessary repairs to return the floor to its original standards.

This product contains wood, glue and plastic which, if subjected to heat or flame, will burn - causing heat, fumes, and consumption of oxygen. **This could cause serious injury or death!**



Sico Europe Limited
The Link Park,
Lympe Industrial Estate,
Lympe, Kent CT21 4LR
Tel: +44 (0) 1303 234000
FREE PHONE: (UK only) 0800 085 8186
Fax: +44 (0) 1303 234001
e-mail: sales@sico-europe.com
www.sico-europe.com

04/04 Part No. 106970-GB

WARNING



Do not use floor:

- Unless panels are tightly locked together;
- If 3mm or more gap shows between panels and/or edge trim;
- When wet;
- Without edge trim;
- If surface is uneven or has missing sections.

Failure to follow instructions could cause a fall and serious injury.

Periodic Maintenance - Wood Parquet Floor

LIGHT CLEANING. Dry-mop, sweep, or vacuum floor daily. Damp-mop floor as required with white spirits.

HEAVY CLEANING. Use white spirits or white spirit wood cleaner. Always re-apply wax after using floor cleaner.

WAXING. One-step cleaner waxes (see 'Light Cleaning') are also recommended for waxing floor after heavy cleaning. **Paste wax is not recommended**, as wax build-up will increase required maintenance.

If desired, the floor may be polished with an electric buffer after drying.

NEVER use water or water-based cleaners or waxes on your SICO wood floor!

NEVER use alcohol, ammonia, kerosene, or turpentine on your SICO wood floor!

Check the set screws for dirt in the sockets. Check that the screws will tighten (not stripped).



DATE: 26/05/04

CLIENT: SICO EUROPE LTD




CREATED BY: TL

WIT No: 8157

LABEL SIZE: 237mm x 317mm

CUST. REF: 106970-GB

COLOURS:

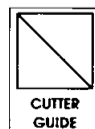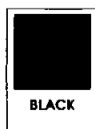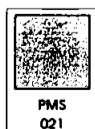

BASE MATERIAL:

WHITE

PLEASE NOTE: THIS ARTWORK HAS BEEN CREATED ON OUR COMPUTER SYSTEM PLEASE CHECK CAREFULLY THE COLOURS SHOWN ABOVE ARE FOR USE AS A GUIDE ONLY AND DO NOT REPRESENT A TRUE COLOUR MATCH